



Guide To Digital Cable Applications

Last Channel Recall







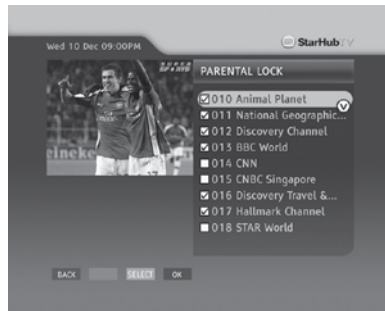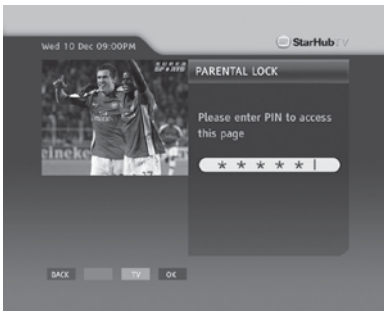

For instant access to the channel you were last viewing, press the **TV** button .

Parental Lock Setting

You may choose to lock a number of channels, after which they will only be accessible via a 6-digit (numeric) Personal Identification Number (PIN). This feature allows parents to control what their children watch.



How To Use

Functions	Directions
1. To lock a channel.	Press the MENU button  on your remote control.
	Select TV Guide followed by Parental Lock on the TV screen.
	Enter your 6-digit numeric PIN to access the Channel Listing screen. (The default PIN is 000000). To set a new PIN, see Change Pin section.
	Scroll to the channel using the UP  or DOWN  arrow button.
	In the Channel Listing screen, use the YELLOW button  to select the channels you wish to lock.
	Press the BLUE button  to confirm and save your selection. The channels you have selected will now be accessible only by entering the correct 6-digit numeric PIN.
2. To unlock a channel.	Press the MENU button  on your remote control. Select TV Guide followed by Parental Lock on the TV screen.
	Enter your 6-digit numeric PIN to access the Channel Listing screen.
	In the Channel Listing screen, use the YELLOW button  to select the channels you wish to unlock.
	Press the BLUE button  to confirm and save your selection. The channels you have selected are now unlocked and accessible by anyone.