








Guide To Digital Cable Applications

Programme Information In Chinese

This mode allows for programme information to be in Chinese text for Chinese channels and in English text for all other channels.

If you prefer, you may change the Preferred Language Setting to English to view all programme information in English only.













How To Use

Functions	Directions
1. To change the Preferred Language.	Press MENU button  , select Settings using the UP  or DOWN  arrow buttons.
	Press RIGHT arrow button  to select General and press OK button  to confirm.
	Use the LEFT  or RIGHT  arrow button to select Bilingual or English as the Preferred Language Setting. <small>Note: Chinese programme information is available only for Chinese programmes.</small>

Programme Alert (Set Reminder)

You can programme your digital set-top box to prompt you with an on-screen message when your favourite programmes are about to be shown. You can also set the preferred time for the message to appear, from 1 to 60 minutes before showtime.

How To Use

Functions	Directions
1. To Add/Delete Alert	Press the GUIDE button  on your remote control.
	Press the UP  or DOWN  arrow button to select the channel for programme you want to be alerted of.
	Press the RIGHT  arrow button, followed by the UP  or DOWN  arrow button to select the appropriate programme time-slot.
	Press the YELLOW (ALERT) button  to access the Set Reminder Screen.
	Press the GREEN (ADD) button  to set your preferred Alert Duration (i.e. how long before the programme starts for the alert message to pop up on-screen).
	By pressing LEFT  or RIGHT  button, you can choose from the following options: •1 min •2 min •5 min •15 min •20 min •30 min •40 min •50 min •60 min Press the OK button  to confirm your selection.
To delete an alert, select the entry you want to delete and press the YELLOW (DELETE) button  . The selected Programme Alert will be deleted from the list.	