



compatibility list for E180

NO	Brand	Model	System Type	OS
1	Acer	5500Z	Notebook	XP VISTA32 VISTA64
2	Acer	5520G	Notebook	XP VISTA32
3	Acer	Acer Aspire 4520	Notebook	Vista Home Basic(32bit)
4	Acer	Acer Aspire 4530	Notebook	XP home edition
5	Acer	Acer Aspire 4710	Notebook	Vista home Basic(32bit)
6	Acer	Acer Aspire 4920	Notebook	Vista Home Basic(32bit)
7	Acer	Acer Aspire 4930G	Notebook	Vista Home Premium(32bit)
8	Acer	Acer Aspire 5320	Notebook	Vista Business(64bit)
9	Acer	Acer Aspire 5530	Notebook	Vista Business(64bit)
10	Acer	Acer Aspire 5630	Notebook	XP media center
11	Acer	Acer Aspire 8920G	Notebook	Vista Home Premium(32bit)
12	Acer	Acer Aspire 9423	Notebook	Vista home premium(32bit)
13	Acer	Acer Ferrari 1100	Notebook	Vista Home Premium(32bit)
14	Acer	Acer TravelMate 5520	Notebook	Vista Home Basic(32bit)
15	Acer	Aspire 5611ZWLMi T2050	Notebook	Windows Vista Home Premium
16	Acer	Aspire 5920-6329	Notebook	Vista Ultimate SP1
17	Acer	Aspire AS9805WKMi	Notebook	XP Media Center 2005
18	Acer	Aspire E650 Viiv Platform	Media Center PC	XP Media Center 2005
19	Acer	Aspire T180	Desktop	Vista Home Premium
20	Acer	Aspire T310	Desktop	XP Home SP1a
21	Acer	Aspire5520G-5A0512	Notebook	2K XP VISTA32 VISTA64
22	Acer	Ferrari 1005WTMi	Notebook	XP Pro SP2
23	Acer	Ferrari 5000-5832	Notebook	Vista Ultimate
24	Acer	PTM51Q-041005	Notebook	XP VISTA32 VISTA64
25	Acer	Travel Mate 620	Notebook	N/A
26	Acer	TravelMate 220	Notebook	N/A
27	Acer	TravelMate 661LMi	Notebook	XP Home SP1
28	Acer	TravelMate 800XCi	Notebook	XP Pro SP1
29	Acer	TravelMate 8100 Series (8104WLMi)	Notebook	XP Pro SP2
30	Acer	TravelMate C104TCi	Tablet PC	XP Pro SP2
31	Acer	TravelMate8000	Notebook	XP Home
32	Acer	Veriton 5600GT	Desktop	XP Pro SP1a
33	Acer	Veriton 7500G	Desktop	XP HOME
34	Aopen	Open Book 1535	Notebook	N/A
35	Apple	Apple Macbook A1181	Notebook	10.5 10.5.1 10.5.2
36	Apple	Apple Macbook Air A1237	Notebook	10.5.2 10.5.3
37	Apple	Apple Macbook Pro	Notebook	10.5 10.5.3
38	Apple	Apple Macbook Pro A1260	Notebook	10.5 10.5.2 10.5.4
39	Apple	eMac	Desktop	MAC OS 10.2
40	Apple	iBook G3 (M8599TA/C)	Notebook	MAC OS 10.1.2
41	Apple	iBook G3 500/12	Notebook	MAC OS 9.1.X, MAC OS 10.0.X
42	Apple	iBook G4 (M9164TA/A)	Notebook	MAC OS 10.3
43	Apple	iMac	Desktop	MAC OS 10.2
44	Apple	iMac (MA199TA/A)	Desktop	MAC OS 10.4.4
45	Apple	iMac (MA589TA/A)	Desktop	MAC OS 10.4.8
46	Apple	iMac (MA590TA/A)	Desktop	MAC OS 10.4.7
47	Apple	iMac (New)	Desktop	MAC OS 10.3.1
48	Apple	iMac Intel Core 2 Duo (MA456TA/A)	Desktop	MAC OS 10.4.8
49	Apple	iMac Intel Core 2 Duo (MA876TA/A)	Desktop	MAC OS 10.4.10
50	Apple	iMac Intel Core 2 Duo (MA878TA/A)	Desktop	MAC OS 10.4.10
51	Apple	iMac Intel Core Duo (MA200TA/A)	Desktop	MAC OS 10.4.4
52	Apple	MA199J/A iMac 17inch	Desktop	MAC OS 10.4
53	Apple	MAC book power G4	Notebook	10.4.1 10.4.11 10.5.4
54	Apple	Mac mini (M9686TA/A)	Desktop	MAC OS 10.3.7



compatibility list for E180

55	Apple	Mac mini Intel Core Duo (MA206TA/A)	Desktop	MAC OS 10.4.5
56	Apple	Mac mini Intel Core Duo (MA607TA/A)	Desktop	MAC OS 10.4.7
57	Apple	Mac mini Intel Core Duo (MA608TA/A)	Desktop	MAC OS 10.4.7
58	Apple	Mac mini Intel Core Solo (MA205TA/A)	Desktop	MAC OS 10.4.5
59	Apple	Mac Pro (MA356TA/A)	Desktop	MAC OS 10.4.7
60	Apple	Mac Pro (MA970TA/A)	Desktop	MAC OSX 10.5.2
61	Apple	MacBook 13' (MB402TA/A)	Notebook	MAC OSX 10.5.2
62	Apple	MacBook Air 13.3'	Notebook	MAC OSX 10.5.2
63	Apple	MacBook Intel Core 2 Duo (MA700TA/A)	Notebook	MAC OS 10.4.8
64	Apple	MacBook Intel Core 2 Duo (MA701TA/A)	Notebook	MAC OS 10.4.8
65	Apple	MacBook MB061J/B	Notebook	MAC OSX 10.5
66	Apple	MacBook Pro (MA896TA/A)	Notebook	MAC OS 10.4.10
67	Apple	MacBook Pro 15' (MA463TA/A)	Notebook	MAC OS 10.4.5
68	Apple	MacBook Pro 15' (MA601TA/A)	Notebook	MAC OS 10.4.6
69	Apple	MacBook Pro 17' (MA611TA/A)	Notebook	MAC OS 10.4.8
70	Apple	Power Mac G4 (Dual Processor)	Desktop	MAC OS 9.2.2
71	Apple	Power Mac G4 (Single Processor)	Desktop	MAC OS 9.2.2
72	Apple	Power Mac G5 Dual Processor (M9747TA/A)	Desktop	MAC OS 10.4
73	Apple	Power Mac G5 Single Processor (M9031TA/A)	Desktop	MAC OS 10.2.7
74	Apple	PowerBook G4 12' (M9183TA/A)	Notebook	MAC OS 10.3.4
75	Apple	PowerMac G4 400	Desktop	MAC OS 8.6.X
76	Asus	A3000N A35C5PDR	Notebook	XP Home SP1
77	Asus	A8H71SL	Notebook	VISTA32 VISTA64
78	Asus	Asus A6000Kt	Notebook	XP Professional
79	Asus	ASUS A8H75SC	Notebook	Vista Home Premium(32bit)
80	Asus	ASUS A8JS A8M72JS-SL	Notebook	Vista Home Premium(32bit)
81	Asus	ASUS F5000RI	Notebook	XP Professional
82	Asus	ASUS Pro31F-AP101M	Notebook	XP media center
83	Asus	ASUS Z99Dc	Notebook	XP Professional
84	Asus	C90S	Notebook	VISTA32 VISTA64
85	Asus	Eee PC 4G-X	Notebook	XP Home SP2
86	Asus	Eee PC 701	Notebook	Linux
87	Asus	Eee PC 901	UMPC	XP Home SP3
88	Asus	F3Q72JP	Notebook	XP VISTA32 VISTA64
89	Asus	F3Tc	Notebook	Vista Home Premium
90	Asus	M6B00N	Notebook	XP Home SP1
91	Asus	U3S	Notebook	Vista Home Premium
92	Asus	U5224F-DR	Notebook	XP
93	Asus	V6X00J	Notebook	XP Home SP2
94	Asus	Z99H73SC-SL	Notebook	VISTA32
95	Asus	Z99HT56TC-DR	Notebook	VISTA32 VISTA64
96	Asus	Asus EeePC 701	Notebook	XP Professional(sp2)
97	BenQ	BenQ Joybook R43	Notebook	Vista Business(32bit)
98	BenQ	BenQ Joybook S32	Notebook	Vista Business(32bit)
99	BenQ	S31(V-128)	Notebook	XP VISTA32
100	BenQ	S31V	Notebook	XP VISTA32
101	BenQ	T31	Notebook	VISTA32 VISTA64
102	ComMaeul	TM-2250B1	Desktop	XP HOME
103	Compaq	Evo N1000v	Notebook	XP PRO
104	Compaq	Evo N620c	Notebook	XP Pro SP1
105	Compaq	Presario 2535AP	Notebook	XP Home SP1a
106	Compaq	Presario 2561us	Notebook	XP Home SP1
107	Compaq	Presario 3200	Desktop	ME



compatibility list for E180

108	Compaq	Presario 3900/CT	Desktop	XP HOME
109	Compaq	Presario 5000-D	Desktop	ME
110	Compaq	Presario 6430NX	Desktop	XP Home SP1
111	Compaq	Presario 7000P	Desktop	ME
112	Compaq	Presario SR1420TW	Desktop	XP Home SP2
113	Compaq	Presario V3000T	Notebook	Vista Home Premium
114	Compaq	Presario V6000Z	Notebook	Vista Home Basic
115	Compaq	R3000Z	Notebook	XP Home SP2
116	Dell	1720	Notebook	XP VISTA32 VISTA64
117	Dell	6400	Notebook	2K XP VISTA32
118	Dell	D1501	Notebook	XP VISTA32 VISTA64
119	Dell	D420	Notebook	XP VISTA32
120	Dell	D600	Notebook	XP
121	Dell	D610	Notebook	XP
122	Dell	D800	Notebook	Linux
123	Dell	D810	Notebook	XP VISTA32
124	Dell	D820	Notebook	XP VISTA32
125	Dell	Dell Inspiron 1420	Notebook	Vista home Basic(32bit)
126	Dell	Dell Latitude C610	Notebook	win2000 Professional
127	Dell	Dell Latitude D430	Notebook	XP Professional
128	Dell	Dell Latitude D520	Notebook	Vista home premium(32bit)
129	Dell	Dell Latitude D600	Notebook	win2000 Professional
130	Dell	Dell Latitude D610	Notebook	win2000 Professional
131	Dell	Dell PowerEdge 700 SATA System	Desktop	Server 2003
132	Dell	DELL Precision Workstation 530	Desktop	XP Pro SP2
133	Dell	Dell Vostro 1400	Notebook	XP Professional
134	Dell	Dell XPS M1330	Notebook	Vista Home Basic(32bit)
135	Dell	Dell XPS M1530	Notebook	Vista Home Premium(32bit)
136	Dell	Dimension 2350	Desktop	XP Home SP1a
137	Dell	Dimension 4100	Desktop	ME
138	Dell	Dimension 4500	Desktop	XP Home
139	Dell	Dimension 4500C	Desktop	XP HOME
140	Dell	Dimension 4550	Desktop	XP Home SP1a
141	Dell	Dimension 4700	Desktop	XP Home SP2
142	Dell	Dimension 5150C	Desktop	XP Home SP2
143	Dell	Dimension 8300	Desktop	XP Home SP1a
144	Dell	Dimension 8400	Desktop	XP Home SP1
145	Dell	Dimension C521	Desktop	Vista Ultimate
146	Dell	Dimension E520	Desktop	Vista Ultimate
147	Dell	Dimension V400c	Desktop	98 1st
148	Dell	GX240-DHP	Desktop	W2k SP2
149	Dell	Inspiron 530	Desktop	Windows Vista Ultimate
150	Dell	Inspiron 600M	Notebook	XP Home SP1
151	Dell	Inspiron 6400	Notebook	XP Home SP2
152	Dell	Inspiron 8200	Notebook	XP HOME
153	Dell	Inspiron E1705	Notebook	Vista Home Premium
154	Dell	Latitude L400-700GT	Notebook	W2K SP1
155	Dell	M4300	Notebook	XP VISTA32 VISTA64
156	Dell	Optiplex GX150	Desktop	W2K SP4
157	Dell	OPTIPLEX GX240	Desktop	XP PRO
158	Dell	Precision 370MT M640402	Desktop	XP Pro SP2
159	Dell	Precision T3400	Desktop	Vista Ultimate SP1
160	Dell	Precision Workstation 650 Series	Desktop	XP Pro SP2
161	Dell	SmartStep 250N	Notebook	XP HOME



compatibility list for E180

162	Dell	Vostro 400 Mini Tower	Desktop	Vista Business
163	Dell	Vostro1400	Notebook	VISTA32
164	Dell	XPS 1730	Notebook	VISTA32 VISTA64
165	Dell	XPS M1530	Notebook	Windows Vista Home Premium
166	Dell	XPS M1710	Notebook	Vista Home Premium
167	Dell	XPS200 Viiv Platform	Media Center PC	XP Media Center 2005
168	Dell	XPS420	Desktop	Vista Home Premium
169	Dell	XPS720	Desktop	Windows Vista Ultimate
170	eMachines	J2604	Desktop	XP Home SP1
171	eMachines	J3204	Desktop	Vista Home Basic
172	eMachines	J4462	Desktop	Windows Vista Home Premium
173	eMachines	J4509	Desktop	Vista Home Premium SP1
174	eMachines	T5230	Desktop	Vista Home Premium
175	EPSON	Endeavor MT7500	Desktop	XP Home SP1a
176	EPSON	Endeavor PRO2500	Desktop	XP Home SP1
177	EPSON	Endeavor Pro4300	Desktop	Windows Vista Home Premium
178	Founder	Founder R650	Notebook	XP home edition
179	Fujitsu	E8210	Notebook	XP VISTA32
180	Fujitsu	FMV BIBLO MG/A50	Notebook	Vista Home Premium SP1
181	Fujitsu	FMV BIBLO MG70W	Notebook	Vista Home Premium
182	Fujitsu	FMV BIBLO NX90X	Notebook	Vista Home Premium
183	Fujitsu	FMV C90EW/C	Desktop	XP Media Center 2004
184	Fujitsu	FMV Deskpower CE/A509	Desktop	Vista Home Premium SP1
185	Fujitsu	FMV DESKPOWER ME4/535	Desktop	98 SE
186	Fujitsu	FMV LOOX R70Y	Notebook	Windows Vista Business
187	Fujitsu	FMV-BIBLO LOOX T50U/V	Notebook	Windows Vista Home Basic
188	Fujitsu	FMV-BIBLO LOOX U50WN	Notebook	XP Pro SP2
189	Fujitsu	FMV-BIBLO MG50S	Notebook	XP Home SP2
190	Fujitsu	FMV-BIBLO MG55U	Notebook	Vista Home Basic
191	Fujitsu	FMV-BIBLO MG75S	Notebook	XP Home SP2
192	Fujitsu	FMV-BIBLO NB16B/M	Notebook	XP HOME
193	Fujitsu	FMV-BIBLO NB70E	Notebook	XP Home SP1
194	Fujitsu	FMV-BIBLO NB75J	Notebook	XP Home SP2
195	Fujitsu	FMV-BIBLO NB80L	Notebook	XP Pro SP2
196	Fujitsu	FMV-BIBLO NF40U/V	Notebook	Vista Home Basic
197	Fujitsu	FMV-BIBLO NX50J	Notebook	XP Home SP2
198	Fujitsu	FMV-BIBLO NX95T/D	Notebook	XP Home SP2
199	Fujitsu	FMV-BIBOL NB9/90R	Notebook	XP PRO
200	Fujitsu	FMV-D3250	Desktop	Windows Vista Business
201	Fujitsu	FMV-DESKPOWER CE177B	Desktop	XP Home
202	Fujitsu	FMV-DESKPOWER CE40U7	Desktop	Vista Home Basic
203	Fujitsu	FMV-DESKPOWER CE50J7/S	Desktop	XP Home SP2
204	Fujitsu	FMV-DESKPOWER CE50X9	Desktop	Vista Home Premium
205	Fujitsu	FMV-DESKPOWER LX40X	Desktop	Vista Home Premium
206	Fujitsu	FMV-DESKPOWER ME5/655	Desktop	ME
207	Fujitsu	FMVNB9/90R	Notebook	XP Home SP1
208	Fujitsu	FMVNX70L/W	Notebook	XP Home SP2
209	Fujitsu	FMV-STYLISTIC TB10/B	Tablet PC	XP Tablet PC Edition
210	Fujitsu	FMV-TEO50UD	Desktop	Vista Home Basic
211	Fujitsu	FMVTX70L	Desktop	XP Home SP2
212	Fujitsu	Fujitsu A3130	Notebook	Vista Home Basic(32bit)
213	Fujitsu	Fujitsu B6220	Notebook	Vista Home Premium(32bit)
214	Fujitsu	Fujitsu BIBLO MG/A75	Notebook	Vista Home Premium(32bit)
215	Fujitsu	Fujitsu E8410	Notebook	Vista Business(32bit)



compatibility list for E180

216	Fujitsu	Fujitsu FMV NX70W/D	Notebook	Vista home premium(32bit)
217	Fujitsu	Fujitsu FMV-BIBLO NB55UD	Notebook	Vista Home Premium(32bit)
218	Fujitsu	Fujitsu P8010	Notebook	Vista Home Premium(32bit)
219	Fujitsu	Fujitsu S7211	Notebook	Vista Home Basic(32bit)
220	Fujitsu	Fujitsu T4215	Notebook	Vista Home Premium
221	Fujitsu	Fujitsu U1010	Notebook	XP Tablet PC Edition
222	Fujitsu	Fujitsu V1020	Notebook	Vista Professional(32bit)
223	Fujitsu	S6510	Notebook	VISTA32 VISTA64
224	Fujitsu	S7111	Notebook	XP VISTA33
225	Fujitsu-Siemens	AMILO D 7830	Notebook	XP Home SP1
226	Fujitsu-Siemens	Fujitsu Siemens Amilo Pro V3505	Notebook	XP Professional
227	Fujitsu-Siemens	Fujitsu Siemens Amilo pi1505	Notebook	Vista home premium(32bit)
228	Fujitsu-Siemens	LIFEBOOK C1020	Notebook	XP Pro SP1
229	Fujitsu-Siemens	LifeBook E7110	Notebook	XP PRO
230	Fujitsu-Siemens	LIFEBOOK S6120	Notebook	XP Pro SP1a
231	Fujitsu-Siemens	SCALEO Pa 1518	Desktop	Vista Home Premium
232	Fujitsu-Siemens	SCALEO Pi 2663	Desktop	Vista Home Premium
233	Fujitsu-Siemens	SCENIC P300	Desktop	XP PRO
234	Gateway	400VTX	Notebook	XP Home SP1a
235	Gateway	700S	Desktop	XP Home SP1a
236	Gateway	7426GX	Notebook	XP Home SP2
237	Gateway	830GM	Media Center PC	XP Media Center 2005
238	Gateway	FX530XM	Desktop	Vista Ultimate
239	Gateway	Gateway MT6452	Notebook	Vista home premium(32bit)
240	Gateway	Gateway MT6841	Notebook	Vista home premium(32bit)
241	Gateway	Gateway T1409j	Notebook	Windows Vista Home Premium
242	Gateway	GT5086j	Desktop	Vista Home Premium
243	Gateway	GT5228j	Desktop	Windows Vista Home Premium
244	Gateway	GT5676	Desktop	Vista Home Premium x64 SP1
245	Gateway	M-1617	Notebook	Vista Home Premium
246	Gateway	M305CRV	Notebook	XP Home SP1a
247	Gateway	MT3303j	Notebook	Windows Vista Home Premium
248	Gateway	MT6452	Notebook	Vista Home Premium
249	Gateway	MX1049C	Notebook	VISTA32 VISTA64
250	Gateway	NX570X	Notebook	Vista Home Premium
251	GIGABYTE	MB41	Desktop	XP Home SP2
252	Haier	Haier W36	Notebook	XP home edition
253	HASEE	HASEE Chengyun L710T	Notebook	Vista Home Premium(32bit)
254	HASEE	HASEE Tianyun F440S	Notebook	XP Professional
255	Hitachi	FLORA 220TX NP4	Notebook	ME, W2K, 98SE
256	HITACHI	PCF-AW33P	Desktop	XP Home SP2
257	HITACHI	Prius Air 670G	Desktop	XP Home SP2
258	HITACHI	Prius Air type R AR33R5T	Desktop	Vista Home Premium
259	HITACHI	Prius Note PN34K5T	Notebook	Windows Vista Home Basic
260	HITACHI	Prius Note type K PN35K5T	Notebook	Vista Home Premium
261	HITACHI	Prius One type W AW37W5U	Desktop	Vista Home Premium
262	HITACHI	PriusGear 150H	Notebook	XP Home SP1a
263	HP	2710P	Notebook	VISTA32 VISTA64
264	HP	a646.de	Desktop	XP HOME
265	HP	Compaq N1000v	Notebook	XP Pro SP1



compatibility list for E180

266	HP	Compaq nx4800/CT	Notebook	XP Pro SP2
267	HP	compaq nx9010	Notebook	XP Pro SP1
268	HP	d530 Small Form Factor	Desktop	XP Home SP1a
269	HP	dv2605/CT	Notebook	Windows Vista Home Premium
270	HP	e-PC 40	Desktop	98 SE
271	HP	e-PC 42	Desktop	W2K
272	HP	HP 2133 Mini-Note PC	UMPC	Vista Home Basic
273	HP	HP compaq 2133 mini	Notebook	Vista Home Basic(32bit)
274	HP	HP Compaq 2210b	Notebook	Vista Home Basic(32bit)
275	HP	HP Compaq 6510b	Notebook	Vista Business(64bit)
276	HP	HP Compaq 6515b	Notebook	Vista Home Basic(32bit)
277	HP	HP Compaq 6520s	Notebook	Vista Home Basic(32bit)
278	HP	HP Compaq NC6220	Notebook	XP Professional XP home edition
279	HP	HP Compaq NC8430	Notebook	XP Professional
280	HP	HP Compaq NX7400	Notebook	XP Professional
281	HP	HP Compaq Presario B1282	Notebook	Vista Home Basic(32bit)
282	HP	HP Compaq Presario V3776TU	Notebook	XP Professional
283	HP	hp d325 ST (DM502AV)	Desktop	XP Home SP1a
284	HP	HP Pavilion dv2705/CT	Notebook	Windows Vista Home Basic
285	HP	HP Pavilion DV6385ea	Notebook	Vista home premium(32bit)
286	HP	HP Pavilion DV9000	Notebook	Vista home premium(32bit)
287	HP	HP Pavilion DV9206TX	Notebook	Vista Home Premium(32bit)
288	HP	HP Pavilion DV9740	Notebook	Vista Home Premium(32bit)
289	HP	HP Pavilion DV9852 eg	Notebook	Vista Home Premium(32bit)
290	HP	HP Pavilion s3120/CT	Desktop	Windows Vista Home Premium
291	HP	HP Pavilion tx1000	Notebook	Vista Home Premium(32bit)
292	HP	m7560y Series Viiv Platform	Media Center PC	XP Media Center 2005
293	HP	m7575tw	Media Center PC	XP Media Center 2005
294	HP	Media Center PC 854n	Media Center PC	XP Media Center 2002
295	HP	nc4200 PY774PA	Notebook	XP Home SP2
296	HP	nc8230	Notebook	2K XP
297	HP	nx6000	Notebook	XP
298	HP	nx6120 (PC417AV)	Notebook	XP Home SP2
299	HP	nx6130	Notebook	XP
300	HP	nx6320	Notebook	2K XP VISTA64
301	HP	nx6325	Notebook	2K XP VISTA64
302	HP	pavilion 2000/C566	Desktop	98 SE
303	HP	Pavilion 504n (Glendale)	Desktop	XP Home SP1
304	HP	Pavilion a1210tw	Desktop	XP Home SP2
305	HP	Pavilion dv2514TX	Notebook	Vista Home Premium
306	HP	Pavilion dv6225us	Notebook	Vista Home Premium
307	HP	Pavilion dv6700t	Notebook	Vista Home Premium x64 SP1
308	HP	Pavilion dv9000T	Notebook	XP Media Center 2005
309	HP	Pavilion dv9200/CT	Notebook	Vista Home Premium
310	HP	Pavilion dv9700t	Notebook	Vista Home Premium x64 SP1
311	HP	Pavilion m8010y	Desktop	Vista Ultimate
312	HP	Pavilion tx1220us	Tablet PC	Vista Home Premium
313	HP	Pavilion zt3101us	Notebook	XP Home SP1a
314	HP	Pavilion zv5000	Notebook	XP Home SP1a
315	HP	Pavillion s3420jp/CT	Desktop	Vista Home Basic
316	HP	tc1100	Tablet PC	XP Tablet PC Edition
317	HP	TouchSmart IQ501	Desktop	Vista Home Premium x64 SP1



compatibility list for E180

318	HP	Vectra VL420	Desktop	W2K SP1
319	HP	VL410	Desktop	98 SE
320	HP	nx6320	Notebook	2K XP VISTA32
321	HP Compaq	6515b	Notebook	XP Pro SP2
322	HP Compaq	nx6125	Notebook	XP Home SP2
323	HTC	Shift	UMPC	Vista Business
324	IBM	IBM Thinpak R60e	Notebook	Vista Business(32bit)
325	IBM	IBM Thinpak R61i	Notebook	Vista Home Basic(32bit)
326	IBM	IBM Thinpak T42	Notebook	XP Professional
327	IBM	IBM Thinpak T61	Notebook	XP Professional
328	IBM	IBM Thinpak X300	Notebook	XP Professional
329	IBM	IBM Thinpak X31	Notebook	XP Professional
330	IBM	IBM Thinpak X41	Notebook	XP Professional
331	IBM	IBM Thinpak X60	Notebook	Vista Business(32bit)
332	IBM	IBM Thinpak X61	Notebook	Vista Business(32bit)
333	IBM	IBM Thinpak Z61t	Notebook	XP Professional
334	IBM	NetVista 6339-3KJ	Desktop	XP PRO
335	IBM	NetVista A22P	Desktop	XP PRO
336	IBM	NetVista A30P 8311-48J	Desktop	XP PRO
337	IBM	NetVista A40 (6881-20J)	Desktop	98 SE
338	IBM	NetVista M42 8303-24U	Desktop	XP PRO
339	IBM	NetVista S42 8319-43U	Desktop	XP Pro SP1a
340	IBM	R60	Notebook	2K XP VISTA32
341	IBM	R61i	Notebook	VISTA32 VISTA64
342	IBM	S50	Desktop	XP PRO
343	IBM	T23	Notebook	XP VISTA32
344	IBM	T42 2373IVS	Notebook	XP Home SP2
345	IBM	T60	Notebook	2K XP VISTA64
346	IBM	ThinkCentre A50P 8195CCJ	Desktop	XP Pro SP1
347	IBM	ThinkCentre M50-N187052	Desktop	XP Pro SP1a
348	IBM	ThinkPad A31 2652-KZG	Notebook	XP PRO
349	IBM	ThinkPad R31 (Type 2656)	Notebook	W2k SP2
350	IBM	ThinkPad R50 (1829-7PJ)	Notebook	XP Pro SP1a
351	IBM	ThinkPad T30 2366-96U	Notebook	XP Pro SP2
352	IBM	ThinkPad T60 (1951-I8V)	Notebook	XP Pro SP2
353	IBM	ThinkPad X31-2884CWU	Notebook	XP Pro SP1a
354	Legend	A820	Notebook	XP PRO
355	Legend	Premia 5223P	Desktop	XP HOME
356	Lenovo	3000 J115	Desktop	Vista Home Basic
357	Lenovo	Lenovo C200	Notebook	Vista Business(32bit)
358	Lenovo	Lenovo ideapad Y510	Notebook	Vista Home Premium
359	Lenovo	Lenovo TianyiF41	Notebook	Vista Home Premium(32bit)
360	Lenovo	Lenovo U110	Notebook	Vista Home Premium(32bit)
361	Lenovo	Lenovo Xuri 420A	Notebook	Vista Home Basic(32bit)
362	Lenovo	Lenovo Zhaoyang E290G	Notebook	XP home edition
363	Lenovo	S180	Notebook	XP Home SP1
364	Lenovo	Think Centre M57 Ultra Small 6062A11	Desktop	Windows Vista Business
365	Lenovo	Think Pad T61 [7658-11J]	Notebook	Windows Vista Business x64
366	Lenovo	Think-Centre M57 Tower 6010A17	Desktop	Windows Vista Business
367	Lenovo	ThinkPad R60	Notebook	Vista Business
368	Lenovo	ThinkPad X300 6476-12J	Notebook	Vista Business SP1
369	Lenovo	ThinkPad X60	Tablet PC	Vista Business
370	LG	LG E500	Notebook	Vista Home Premium(32bit)
371	LG	LG R405	Notebook	Vista Home Premium(32bit)
372	LG	R405-S288C	Notebook	VISTA32 VISTA64



compatibility list for E180

373	Mouse Computer	MDV ADVANCE GT 9600B	Desktop	Windows Vista Ultimate
374	MSI	MSI EX610	Notebook	Vista Home Basic(32bit)
375	MSI	MSI MegaBook PR200	Notebook	Vista Home Basic(32bit)
376	MSI	MSI U110	Notebook	XP Home Edition
377	MSI	Wind Notebook U100	UMPC	XP Home SP3
378	NEC	LaVie C LC900/3E	Notebook	XP PRO
379	NEC	LaVie C LC950/M	Notebook	Vista Home Premium SP1
380	NEC	Lavie C PC-LC900JG	Notebook	Windows Vista Home Premium
381	NEC	LaVie C PC-LC950HJ	Notebook	Vista Ultimate
382	NEC	LaVie G (PC-LG22NRBGG)	Notebook	XP Home SP1
383	NEC	LaVie J LJ500/3E	Notebook	XP Pro SP1
384	NEC	LaVie J PC-LJ700/HH	Notebook	Vista Home Premium
385	NEC	LaVie J PC-LJ750LH	Notebook	Windows Vista Home Premium
386	NEC	LaVie L PC-LL570/GD	Notebook	XP Home SP2
387	NEC	LaVie L PC-LL570/HG	Notebook	Windows Vista Home Premium
388	NEC	Lavie L PC-LL570KG	Notebook	Windows Vista Home Premium
389	NEC	LaVie L PC-LL970HG	Notebook	Vista Home Premium
390	NEC	Lavie M LM500/3E	Notebook	XP Pro SP2
391	NEC	LaVie RX LR700/CD	Notebook	XP Home SP2
392	NEC	Mate (PC-MA90HLZFMHB9)	Desktop	XP PRO
393	NEC	Mate MA86T	Desktop	W2K SP4
394	NEC	NEC Lavie LJ700/L	Notebook	Vista Home Premium(32bit)
395	NEC	NEC Lavie LL550/M	Notebook	Vista Home Premium(32bit)
396	NEC	PC-LL750AD	Notebook	XP Home SP2
397	NEC	PC-LL770CD	Notebook	XP Home SP2
398	NEC	PC-MT4001A	Desktop	XP Home SP2
399	NEC	PC-VL350AD	Desktop	XP Home SP2
400	NEC	PC-VL570KG	Desktop	Windows Vista Home Premium
401	NEC	PC-VS700BD	Desktop	XP Home SP2
402	NEC	ValueOne MT PC-MT2003A	Desktop	XP Home SP2
403	NEC	ValueOne PC-MT600/7A	Desktop	Vista Home Basic
404	NEC	VALUESTAR (PC-VG32S1ZGG)	Desktop	XP Home SP1
405	NEC	VALUESTAR L PC-VL300KG	Desktop	Vista Home Premium
406	NEC	VALUESTAR L PC-VL570KG	Desktop	Vista Home Premium
407	NEC	VALUESTAR L PC-VL770HG	Desktop	Windows Vista Home Premium
408	NEC	VALUESTAR L VL500/MG	Desktop	Vista Home Premium SP1
409	NEC	VALUESTAR N PC-VN550JG	Desktop	Windows Vista Home Premium
410	NEC	VALUESTAR PC-VC700/3E	Desktop	XP PRO
411	NEC	ValueStar PC-VL850R85D	Desktop	ME
412	NEC	VALUESTAR S PC-VS500HG	Desktop	Vista Home Premium
413	NEC	VALUESTAR VL300LG	Desktop	Windows Vista Home Premium
414	NEC	VALUESTAR VR500/E	Desktop	XP Media Center 2005
415	NEC	ValueStar W VW790/GG	Desktop	XP Media Center 2005
416	NEC	VersaPro PC-VA85JAFZAEAB	Notebook	W2K SP4
417	Packard	Packard Bell MX67P023	Notebook	Vista home premium(32bit)
418	Panasonic	CF-T7BW5AJR	Notebook	Windows Vista Business
419	Panasonic	CF-W2DW1AXR	Notebook	XP Pro SP1a
420	Panasonic	CF-Y2EW1AXR	Notebook	XP Pro SP2
421	Panasonic	Let's note CF-M2EV	Notebook	ME
422	Panasonic	Let's note CF-T5MW4AJR	Notebook	Vista Business
423	Panasonic	Let's note CF-W5LW8AXR	Notebook	XP Pro SP2
424	Panasonic	Let's Note R6 CF-R6MW4AJR	Notebook	Windows Vista Business



compatibility list for E180

425	Panasonic	Panasonic CF-T5AW1P JR	Notebook	Vista Business(32bit)
426	Panasonic	Panasonic CF-Y7AWDB JR	Notebook	Vista Business(32bit)
427	Panasonic	Panasonic CF-Y7AWDP JR	Notebook	Vista Business(32bit)
428	Rover	Rover Navigator V211	Notebook	Vista Starter(32bit)
429	Rover	Rover Voyager V514VHP	Notebook	Vista Home Premium(32bit)
430	Samsung	MF20	Desktop	XP HOME
431	Samsung	P50	Notebook	2K XP
432	Samsung	R45	Notebook	XP
433	Samsung	R65	Notebook	XP VISTA32
434	Samsung	Samsung R25e	Notebook	Vista Home Basic(32bit)
435	Samsung	Samsung SENS Q45	Notebook	Vista Home Premium(32bit)
436	Sharp	AQUOS PC-AX30V	Desktop	Vista Home Premium
437	Sharp	Mebius CW PC-CW50V	Notebook	Windows Vista Home Premium
438	Sharp	Mebius Note PC-WE40S	Notebook	Vista Home Basic
439	Sharp	Mebius PC-AE50M	Notebook	XP Home SP2
440	Sharp	Mebius PC-GP1-C7M	Notebook	XP Home
441	Sharp	Mebius PC-GP2-C3W	Notebook	XP Home SP2
442	Sharp	Mebius PC-MM2-5NE	Notebook	XP Home SP1a
443	Sharp	Mebius PC-RD1-C1M	Notebook	XP Home SP1a
444	Sharp	PC-AL70G	Notebook	XP Home SP2
445	Sharp	PC-FW50X	Notebook	Vista Home Premium
446	Sharp	PC-MJ 720R	Notebook	ME
447	Sharp	PC-MM50G	Notebook	XP Home SP2
448	Sharp	PC-SV1-7DD	Notebook	XP Home SP1a
449	Sharp	PC-TX100K	Desktop	XP Home SP2
450	Sharp	Sharp PC—WT70T	Notebook	Vista Home Premium(32bit)
451	Sony	CR23	Notebook	VISTA32 VISTA64
452	Sony	FZ25	Notebook	VISTA32 VISTA64
453	Sony	NR23H	Notebook	VISTA32 VISTA64
454	Sony	PCG-C1MAH	Notebook	XP Home
455	Sony	PCG-C1MR/BP	Notebook	XP Home
456	Sony	PCG-C1MRX	Notebook	XP Home
457	Sony	PCG-C1MSX	Notebook	XP Home
458	Sony	PCG-C1MT	Notebook	XP Home
459	Sony	PCG-C1MZX	Notebook	XP Home
460	Sony	PCG-F70BP	Notebook	win98
461	Sony	PCG-FR33/B	Notebook	XP Home SP1
462	Sony	PCG-FR700	Notebook	XP Home
463	Sony	PCG-FR700H	Notebook	XP Home
464	Sony	PCG-FR720	Notebook	XP Home
465	Sony	PCG-FR720L	Notebook	XP Home
466	Sony	PCG-FR77E/B	Notebook	XP Home SP1
467	Sony	PCG-FR77G/B	Notebook	XP Home
468	Sony	PCG-FR77J/B	Notebook	XP Home SP1a
469	Sony	PCG-FX11G/BP	Notebook	ME
470	Sony	PCG-FX11J	Notebook	XP Home
471	Sony	PCG-FX11S/BP	Notebook	XP Home
472	Sony	PCG-FX11V	Notebook	XP Home
473	Sony	PCG-FX33G/BP	Notebook	ME
474	Sony	PCG-FX33S	Notebook	XP Home
475	Sony	PCG-FX55G/BP	Notebook	ME
476	Sony	PCG-FX55J/B	Notebook	XP Home
477	Sony	PCG-FX55V/BP	Notebook	XP Home
478	Sony	PCG-FX60G/K	Notebook	W2K



compatibility list for E180

479	Sony	PCG-FX77G/BP	Notebook	ME
480	Sony	PCG-FX77S/BP	Notebook	XP Home
481	Sony	PCG-FX77V/BP	Notebook	XP Home
482	Sony	PCG-FX77Z/BP	Notebook	XP Home
483	Sony	PCG-FX950H	Notebook	XP Home
484	Sony	PCG-FX990	Notebook	XP Home
485	Sony	PCG-FX990L	Notebook	XP Home
486	Sony	PCG-FX99V/BP	Notebook	XP Home
487	Sony	PCG-FXA10	Notebook	XP Home
488	Sony	PCG-FXA10H	Notebook	XP Home
489	Sony	PCG-GR18C	Notebook	XP Home
490	Sony	PCG-GR5E/BP	Notebook	XP Home
491	Sony	PCG-GR5F/BP	Notebook	XP Home
492	Sony	PCG-GR5N/BP	Notebook	XP Home
493	Sony	PCG-GR7E	Notebook	XP Home
494	Sony	PCG-GR7F	Notebook	XP Home
495	Sony	PCG-GR9	Notebook	ME
496	Sony	PCG-GR9/K	Notebook	W2K
497	Sony	PCG-GR9E	Notebook	XP Home
498	Sony	PCG-GR9F/P	Notebook	XP PRO
499	Sony	PCG-GRS50/B	Notebook	XP Home
500	Sony	PCG-GRS55/B	Notebook	XP Home SP1
501	Sony	PCG-GRS70/P	Notebook	XP PRO
502	Sony	PCG-GRT25	Notebook	XP Home
503	Sony	PCG-GRT25L	Notebook	XP Home
504	Sony	PCG-GRT30LP	Notebook	XP PRO
505	Sony	PCG-GRT30P	Notebook	XP PRO
506	Sony	PCG-GRT55/B	Notebook	XP Home SP1
507	Sony	PCG-GRT55E/B	Notebook	XP Home SP1
508	Sony	PCG-GRT77/B	Notebook	XP Home SP1
509	Sony	PCG-GRT77E/P	Notebook	XP Pro SP1
510	Sony	PCG-GRT99/P	Notebook	XP Pro SP1
511	Sony	PCG-GRT99S/P	Notebook	XP PRO
512	Sony	PCG-GRT99V/P	Notebook	XP Pro SP1a
513	Sony	PCG-GRV7LP	Notebook	XP PRO
514	Sony	PCG-GRV7P	Notebook	XP PRO
515	Sony	PCG-GRV7TP	Notebook	XP PRO
516	Sony	PCG-GRV88G	Notebook	XP Home SP1
517	Sony	PCG-GRV99G	Notebook	XP Pro SP1
518	Sony	PCG-GRX1P	Notebook	XP PRO
519	Sony	PCG-GRX3HP	Notebook	XP PRO
520	Sony	PCG-GRX3LP	Notebook	XP PRO
521	Sony	PCG-GRX3P	Notebook	XP PRO
522	Sony	PCG-GRX52G/B	Notebook	XP Home
523	Sony	PCG-GRX71	Notebook	XP Home
524	Sony	PCG-GRX81G/P	Notebook	XP PRO
525	Sony	PCG-GRX90/P	Notebook	XP PRO
526	Sony	PCG-GRX92G/P	Notebook	XP PRO
527	Sony	PCG-GRZ10	Notebook	XP Home
528	Sony	PCG-GRZ20	Notebook	XP Home
529	Sony	PCG-GRZ20L	Notebook	XP Home
530	Sony	PCG-GRZ77/B	Notebook	XP Home SP1
531	Sony	PCG-GT3/K	Notebook	W2K
532	Sony	PCG-NV77M/BP	Notebook	XP Home
533	Sony	PCG-NV7EL	Notebook	XP Home
534	Sony	PCG-NV7L	Notebook	XP Home



compatibility list for E180

535	Sony	PCG-NV99E/B	Notebook	XP Home
536	Sony	PCG-NV99M/BP	Notebook	XP Home
537	Sony	PCG-QR1S/BP	Notebook	ME
538	Sony	PCG-QR3/BP	Notebook	XP Home
539	Sony	PCG-QR3E/BP	Notebook	XP Home
540	Sony	PCG-QR3S/BP	Notebook	XP Home
541	Sony	PCG-R505/ABW	Notebook	ME
542	Sony	PCG-R505AFT	Notebook	XP Home
543	Sony	PCG-R505AGT	Notebook	XP Home
544	Sony	PCG-R505B/P	Notebook	XP Pro
545	Sony	PCG-R505BFL/P	Notebook	XP PRO
546	Sony	PCG-R505F/BD	Notebook	XP Home
547	Sony	PCG-R505FR/D	Notebook	XP Home
548	Sony	PCG-R505J/BD	Notebook	XP Home
549	Sony	PCG-R505MFL	Notebook	XP Home
550	Sony	PCG-R505MGH	Notebook	XP Home
551	Sony	PCG-R505MP	Notebook	XP PRO
552	Sony	PCG-R505Q/BD	Notebook	XP Home
553	Sony	PCG-R505R/AK	Notebook	W2K
554	Sony	PCG-R505S/PD	Notebook	XP PRO
555	Sony	PCG-R505TFP	Notebook	XP PRO
556	Sony	PCG-R505V/BD	Notebook	XP Home
557	Sony	PCG-R505VF/K	Notebook	W2K
558	Sony	PCG-R505VJ/K	Notebook	W2k SP2
559	Sony	PCG-R505VM/K	Notebook	W2k SP3
560	Sony	PCG-R505W/PD	Notebook	XP PRO
561	Sony	PCG-R505X/PD	Notebook	XP PRO
562	Sony	PCG-SR1M/BP	Notebook	ME
563	Sony	PCG-SR9M/K	Notebook	W2K
564	Sony	PCG-SRX3/BD	Notebook	XP Home
565	Sony	PCG-SRX3E/BD	Notebook	XP Home
566	Sony	PCG-SRX3F/BD	Notebook	XP Home
567	Sony	PCG-SRX3S/BD	Notebook	XP Home
568	Sony	PCG-SRX55H	Notebook	XP Home
569	Sony	PCG-SRX55L	Notebook	XP Home
570	Sony	PCG-SRX55TH	Notebook	XP Home
571	Sony	PCG-SRX55TL	Notebook	XP Home
572	Sony	PCG-SRX7	Notebook	XP Home
573	Sony	PCG-SRX7E/P	Notebook	XP PRO
574	Sony	PCG-SRX7F/PB	Notebook	XP PRO
575	Sony	PCG-TR1/B	Notebook	XP Home SP1
576	Sony	PCG-TR1L	Notebook	XP Home SP1
577	Sony	PCG-TR1T	Notebook	XP Home
578	Sony	PCG-TR2/B	Notebook	XP Home SP1
579	Sony	PCG-TR3E/B	Notebook	XP Home SP1a
580	Sony	PCG-TR5B	Notebook	XP Home SP1a
581	Sony	PCG-U1	Notebook	XP Home
582	Sony	PCG-U101	Notebook	XP Home SP1
583	Sony	PCG-U101/P	Notebook	XP PRO
584	Sony	PCG-U3	Notebook	XP Home
585	Sony	PCG-U3/P	Notebook	XP PRO
586	Sony	PCG-U70P	Notebook	XP Pro SP1
587	Sony	PCG-V505/B	Notebook	XP Home SP1
588	Sony	PCG-V505E/B	Notebook	XP Home SP1
589	Sony	PCG-V505F/B	Notebook	XP Home SP1
590	Sony	PCG-V505G/B	Notebook	XP Home SP1a



compatibility list for E180

591	Sony	PCG-V505GL	Notebook	XP Home SP1
592	Sony	PCG-V505GTP	Notebook	XP Pro SP1
593	Sony	PCG-V505L	Notebook	XP Home
594	Sony	PCG-V505P	Notebook	XP PRO
595	Sony	PCG-V505R/PB	Notebook	XP Pro SP1
596	Sony	PCG-V505S/PB	Notebook	XP Pro SP1
597	Sony	PCG-V505T	Notebook	XP Home
598	Sony	PCG-V505W/P	Notebook	XP PRO
599	Sony	PCG-VX7/BD	Notebook	XP Home
600	Sony	PCG-VX9/P	Notebook	XP PRO
601	Sony	PCG-X505/P	Notebook	XP Pro SP1
602	Sony	PCG-Z1/P	Notebook	XP Pro SP1
603	Sony	PCG-Z1GP	Notebook	XP Pro SP1
604	Sony	PCG-Z1LP	Notebook	XP PRO
605	Sony	PCG-Z1R/P	Notebook	XP Pro SP1
606	Sony	PCG-Z1RLP	Notebook	XP Home SP1
607	Sony	PCG-Z1T/P	Notebook	XP Pro SP1
608	Sony	PCG-Z1V/P	Notebook	XP Pro SP1
609	Sony	PCG-Z1VE	Notebook	XP Home SP1
610	Sony	PCG-Z1X/P	Notebook	XP Pro SP1a
611	Sony	PCG-Z1XE/B	Notebook	XP Home SP1a
612	Sony	PCV-HS22B	Desktop	XP Home SP1
613	Sony	PCV-HS23B	Desktop	XP Home SP1
614	Sony	PCV-HS50B	Desktop	XP Home
615	Sony	PCV-HS80B	Desktop	XP Home
616	Sony	PCV-HS81BT5	Desktop	XP Home SP1
617	Sony	PCV-HS83BC7	Desktop	XP Home
618	Sony	PCV-HS91B	Desktop	XP Home SP1
619	Sony	PCV-HS92B	Desktop	XP Home
620	Sony	PCV-HX50B	Desktop	XP Home SP2
621	Sony	PCV-HX61B7	Desktop	XP Home SP1a
622	Sony	PCV-HX80B7	Desktop	XP Home SP1a
623	Sony	PCV-HX81B9	Desktop	XP Home SP1a
624	Sony	PCV-J10/V5	Desktop	98 SE
625	Sony	PCV-J15	Desktop	ME
626	Sony	PCV-J20A	Desktop	ME
627	Sony	PCV-J20GBP	Desktop	ME
628	Sony	PCV-J20GV7BP	Desktop	ME
629	Sony	PCV-J21	Desktop	XP Home
630	Sony	PCV-J21MG	Desktop	XP Home
631	Sony	PCV-JX10	Desktop	XP Home
632	Sony	PCV-JX12	Desktop	XP Home
633	Sony	PCV-LX33/BP	Desktop	XP Home
634	Sony	PCV-LX56/BP	Desktop	XP Home
635	Sony	PCV-LX92G/BP	Desktop	ME
636	Sony	PCV-LX93G/BP	Desktop	XP Home
637	Sony	PCV-LX95G/BP	Desktop	XP Home
638	Sony	PCV-LX96G/BP	Desktop	XP Home
639	Sony	PCV-MX5GK	Desktop	W2K SP1
640	Sony	PCV-MXS1	Desktop	XP Home
641	Sony	PCV-MXS2R	Desktop	XP Home
642	Sony	PCV-MXS3	Desktop	XP Home
643	Sony	PCV-MXS3R	Desktop	XP Home
644	Sony	PCV-MXS5R	Desktop	XP Home
645	Sony	PCV-MXS7R	Desktop	XP Home
646	Sony	PCV-RX52	Desktop	ME



compatibility list for E180

647	Sony	PCV-RX53	Desktop	XP Home
648	Sony	PCV-RX55	Desktop	XP Home
649	Sony	PCV-RX72K	Desktop	W2K SP1
650	Sony	PCV-RX73	Desktop	XP Home
651	Sony	PCV-RX75	Desktop	XP Home
652	Sony	PCV-RX76	Desktop	XP Home
653	Sony	PCV-RZ14G	Desktop	XP HOME
654	Sony	PCV-RZ50	Desktop	XP Home
655	Sony	PCV-RZ51	Desktop	XP Home SP1
656	Sony	PCV-RZ53	Desktop	XP Home SP1
657	Sony	PCV-RZ55	Desktop	XP Home SP1a
658	Sony	PCV-RZ61	Desktop	XP Home SP1
659	Sony	PCV-RZ62	Desktop	XP Home SP1
660	Sony	PCV-RZ65	Desktop	XP Home SP1a
661	Sony	PCV-RZ70P	Desktop	XP PRO
662	Sony	PCV-RZ71P	Desktop	XP Pro SP1
663	Sony	PCV-RZ72P	Desktop	XP Pro SP1
664	Sony	PCV-RZ73P	Desktop	XP Pro SP1
665	Sony	PCV-RZ75P	Desktop	XP Pro SP1
666	Sony	PCV-V10B/W	Desktop	XP Home SP1
667	Sony	PCV-V11B/W	Desktop	XP Home SP1a
668	Sony	PCV-V151B-B	Desktop	XP Home SP1a
669	Sony	PCV-V505GP	Notebook	XP Pro SP1
670	Sony	PCV-W101/B	Desktop	XP Home
671	Sony	PCV-W101A/W	Desktop	XP Home
672	Sony	PCV-W102(B)	Desktop	XP Home
673	Sony	PCV-W120(L)	Desktop	XP Home
674	Sony	PCV-W121	Desktop	XP Home SP1
675	Sony	PCV-W500	Desktop	XP Home SP1
676	Sony	PCV-W701B	Desktop	XP Home SP1
677	Sony	PCV-W702B	Desktop	XP Home SP1a
678	Sony	Sony Corporation VGN-FE18C	Notebook	XP Professional
679	Sony	Sony VCN-C51HA	Notebook	Vista Home Basic(32bit)
680	Sony	Sony VCN-C51HB	Notebook	Vista Home Basic(32bit)
681	Sony	Sony VGN FZ350FE	Notebook	Vista Home Premium(32bit)
682	Sony	Sony VGN NR21J	Notebook	Vista Home Premium(32bit)
683	Sony	Sony VGN NR23H	Notebook	Vista Home Basic(32bit)
684	Sony	Sony VGN UX50	Notebook	XP home edition
685	Sony	Sony VGN-C61HB	Notebook	Vista home Basic(32bit)
686	Sony	Sony VGN-NR17G	Notebook	Vista Home Premium(32bit)
687	Sony	Sony VGN-SZ340p	Notebook	XP Professional
688	Sony	Sony VGN-TX46C/B	Notebook	XP home edition
689	Sony	SONY-AR38C	Notebook	VISTA32 VISTA64
690	Sony	SONY-FE48C	Notebook	XP VISTA32 VISTA64
691	Sony	VAIO PCV-J12	Desktop	ME
692	Sony	VAIO PCV-R52 V5	Desktop	98 SE
693	Sony	VAIO type N VGN-NR50B	Notebook	Windows Vista Home Premium
694	Sony	VAIO VGX-TP1	Desktop	Windows Vista Home Premium
695	Sony	VAIO VGX-TP1WS	Desktop	Windows Vista Home Premium
696	Sony	VGC-H70B7	Desktop	XP Home SP2
697	Sony	VGC-H72DB2R	Desktop	XP Home SP2
698	Sony	VGC-HX62B7	Desktop	XP Home SP2
699	Sony	VGC-HX72B7	Desktop	XP Home SP2
700	Sony	VGC-LA50B	Desktop	XP Home SP2
701	Sony	VGC-LJ50B	Desktop	Vista Home Premium
702	Sony	VGC-LJ50B/B	Desktop	Vista Home Premium



compatibility list for E180

703	Sony	VGC-M50B/S	Desktop	XP Home SP2
704	Sony	VGC-RA50	Desktop	XP Home SP1a
705	Sony	VGC-RA51	Desktop	XP Home SP2
706	Sony	VGC-RA53L7	Desktop	XP Home SP2
707	Sony	VGC-RA60	Desktop	XP Home SP1
708	Sony	VGC-RA70P	Desktop	XP Pro SP1a
709	Sony	VGC-RA71PL9	Desktop	XP Pro SP2
710	Sony	VGC-RC72DP	Desktop	XP Pro SP2
711	Sony	VGC-RM53D	Media Center PC	Vista Home Premium
712	Sony	VGC-RM91S1	Desktop	Windows Vista Home Premium
713	Sony	VGC-RM93US	Desktop	Windows Vista Ultimate
714	Sony	VGC-V171	Desktop	XP Home SP1a
715	Sony	VGC-V201	Desktop	XP Home SP1a
716	Sony	VGC-V202RB	Desktop	XP Home SP2
717	Sony	VGC-VA200B	Desktop	XP Home SP2
718	Sony	VGN-A60B	Notebook	XP Home SP1a
719	Sony	VGN-A61B	Notebook	XP Home SP2
720	Sony	VGN-A62B	Notebook	XP Home SP2
721	Sony	VGN-A63	Notebook	XP Home SP2
722	Sony	VGN-A70P	Notebook	XP Pro SP1a
723	Sony	VGN-AR50B	Notebook	XP Home SP2
724	Sony	VGN-AR73DB	Notebook	Windows Vista Home Premium
725	Sony	VGN-AR91S	Notebook	XP Home SP2
726	Sony	VGN-AS33B	Notebook	XP Home SP2
727	Sony	VGN-B90PS	Notebook	XP Pro SP2
728	Sony	VGN-BX4KANB	Notebook	Windows Vista Business
729	Sony	VGN-BX90S	Notebook	XP Home SP2
730	Sony	VGN-BZAANS	Notebook	Vista Business SP1
731	Sony	VGN-C240E/B	Notebook	Vista Home Premium
732	Sony	VGN-C50HB/W	Notebook	Windows Vista Home Basic
733	Sony	VGN-E50B/B	Notebook	XP Home SP1a
734	Sony	VGN-E91B/B	Notebook	XP Home SP2
735	Sony	VGN-FJ21B/L	Notebook	XP Home SP2
736	Sony	VGN-FS51B	Notebook	XP Home SP2
737	Sony	VGN-FS70B	Notebook	XP Home SP2
738	Sony	VGN-FT50B	Notebook	XP Home SP2
739	Sony	VGN-FT53DB	Notebook	Vista Home Premium
740	Sony	VGN-FW30B	Notebook	Vista Home Premium SP1
741	Sony	VGN-FZ50B	Notebook	Windows Vista Home Premium
742	Sony	VGN-G1KBN	Notebook	Windows Vista Business
743	Sony	VGN-K70B	Notebook	XP Home SP1a
744	Sony	VGN-K71B	Notebook	XP Pro SP2
745	Sony	VGN-N50HB	Notebook	Windows Vista Home Basic
746	Sony	VGN-S38TP	Notebook	XP Pro SP2
747	Sony	VGN-S51B	Notebook	XP Home SP2
748	Sony	VGN-S53B/S	Notebook	XP Home SP2
749	Sony	VGN-S54B/S	Notebook	XP Home SP2
750	Sony	VGN-S70B	Notebook	XP Home SP1a
751	Sony	VGN-S71PB	Notebook	XP Pro SP2
752	Sony	VGN-S72PB/B	Notebook	XP Pro SP2
753	Sony	VGN-SR70B/S	Notebook	Vista Home Premium SP1
754	Sony	VGN-SZ23TP/C	Notebook	XP Pro SP2
755	Sony	VGN-SZ70B/B	Notebook	XP Home SP2
756	Sony	VGN-SZ750N/C	Notebook	Vista Business SP1
757	Sony	VGN-SZ94US	Notebook	Windows Vista Ultimate



compatibility list for E180

758	Sony	VGN-T70B	Notebook	XP Home SP2
759	Sony	VGN-TX16TP/W	Notebook	XP Pro SP2
760	Sony	VGN-TX50B/B	Notebook	XP Home SP2
761	Sony	VGN-TZ73B	Notebook	Vista Home Premium SP1
762	Sony	VGN-TZ90S	Notebook	Windows Vista Home Premium
763	Sony	VGN-U50	Notebook	XP Home SP1a
764	Sony	VGN-UX50	Notebook	XP Home SP2
765	Sony	VGN-Y70P	Notebook	XP Pro SP2
766	Sony	VGN-Z70B	Notebook	Vista Home Premium SP1
767	Sony	VGX-TP1	Desktop	Vista Home Premium
768	Sony	VGX-X90P	Desktop	XP Pro SP2
769	Sony	VGX-XL1D	Desktop	Windows Vista Home Premium
770	SOTEC	M355V	Desktop	98 SE
771	SOTEC	PC Station BJ3316P	Desktop	Vista Home Premium SP1
772	SOTEC	PC STATION E4200XP	Desktop	XP PRO
773	SOTEC	PX7513P (PC Station)	Desktop	Windows Vista Home Premium
774	SOTEC	Station BA9715P	Desktop	Windows Vista Home Premium
775	SOTEC	WinBook DN3000	Notebook	Windows Vista Home Basic
776	SOTEC	WinBook DN5020	Notebook	Vista Home Premium
777	SOTEC	WinBook WD311	Notebook	XP Home SP2
778	SOTEC	WinBook WH5514P	Notebook	Vista Home Premium
779	SOTEC	WJ4160R	Notebook	XP Pro SP2
780	TG	TG Averatec 2500	Notebook	Vista Home Premium(32bit)
781	TG	TG Averatec 8300	Notebook	Vista Home Premium(32bit)
782	Toshiba	A100	Notebook	XP VISTA32
783	Toshiba	dynabook AX/940LS	Notebook	XP Home SP2
784	Toshiba	dynabook AX1/424CME	Notebook	XP Home SP1a
785	Toshiba	dynabook Qosmio G40/97D	Notebook	Vista Home Premium
786	Toshiba	Dynabook Satellite 2210X	Notebook	98 SE
787	Toshiba	dynabook Satellite WXW/79CW	Notebook	Windows Vista Home Premium
788	Toshiba	DynaBook SS S5/280PNLN	Notebook	XP Pro SP2
789	Toshiba	dynabook SS SX/15A	Notebook	Vista Business
790	Toshiba	dynabook TX/68D	Notebook	Windows Vista Home Premium
791	Toshiba	DynaBook V9/W14LDEW	Notebook	XP Home SP1
792	Toshiba	DynaBook WX/3727CDS	Notebook	XP Home SP2
793	Toshiba	EQUIUM 5080	Desktop	XP Pro SP1a
794	Toshiba	EQUIUM 5190 PE51918CNY111	Desktop	Windows Vista Business
795	Toshiba	M5	Notebook	XP
796	Toshiba	Protégé 3505	Tablet PC	98 1st
797	Toshiba	Qosmio E10/2JCDDT	Notebook	XP Home SP1a
798	Toshiba	Qosmio F50 PQF5088GLR	Notebook	Vista Home Premium SP1
799	Toshiba	Qosmio G20 PQG20390LS	Notebook	XP Home SP2
800	Toshiba	Satellite A100-VA9	Notebook	Vista Home Premium
801	Toshiba	Satellite A25-S279	Notebook	XP Home SP1
802	Toshiba	Satellite L40 PSL48T-02D00J	Notebook	Vista Home Basic
803	Toshiba	Satellite Pro 6100	Notebook	XP PRO
804	Toshiba	Satellite X205-S9349	Notebook	Vista Home Premium
805	Toshiba	Toshiba Dynabook AX/53C	Notebook	Vista Home Premium(32bit)
806	Toshiba	Toshiba Dynabook CX/45C	Notebook	Vista Home Premium(32bit)
807	Toshiba	Toshiba Dynabook SS RX1/STA	Notebook	Vista Business(32bit)
808	Toshiba	TOSHIBA PORTEGE M803	Notebook	Vista Home Basic(32bit)
809	Toshiba	Toshiba Satellita L30-107	Notebook	Vista home Basic(32bit)
810	Toshiba	Toshiba Satellite A135	Notebook	Vista Home premium(32bit)
811	Toshiba	Toshiba Satellite A200	Notebook	Vista Home premium(32bit)
812	Toshiba	TOSHIBA Satellite M306	Notebook	Vista Home Basic(32bit)
813	Toshiba	Toshiba Satellite P105	Notebook	Vista Home premium(32bit)



compatibility list for E180

814	Toshiba	TX67CB	Notebook	VISTA32
815	ViewSonic	TPCV1250S	Tablet PC	XP Tablet PC Edition